


INSTALLATION PROCEDURE FOR BURGESS CLIP-IN ACCESS PANELS

These installation instructions are relevant for both budget and security lock access panels.

The access panel is supplied with the following components:

2 No. Pivot Brackets with Attached Pivot Rods

The attached diagrams (Fig.1 & Fig.2) show the fitted access panel and support brackets.

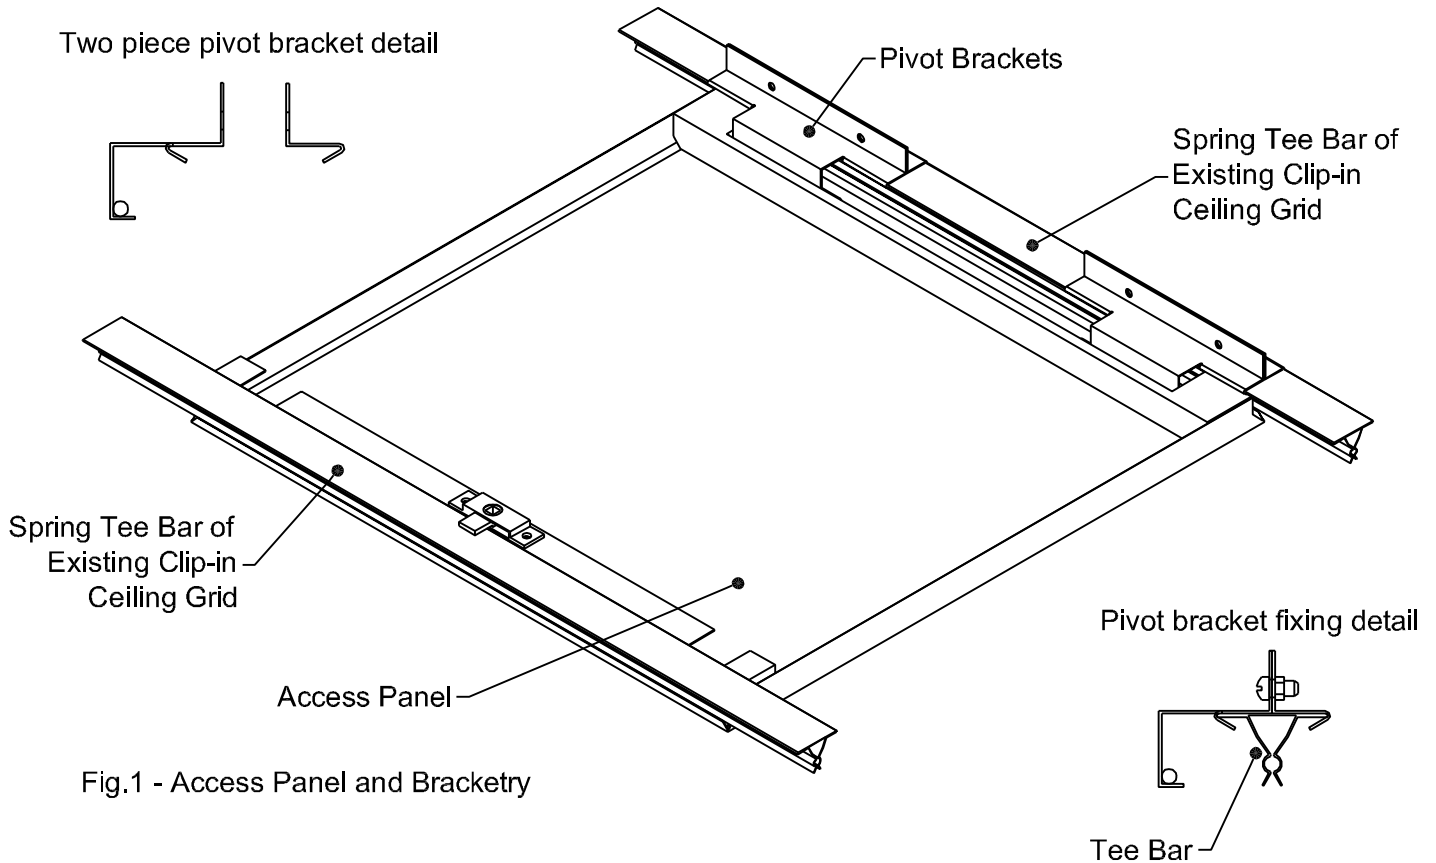

Installation Guide

- 1) Locate the pieces of the two pivot brackets and loosely fix together with nuts & bolts. Each bracket consists of two components, one with a $\text{\O}6\text{mm}$ pivot rod and one without.
- 2) Locate the pivot brackets over the spring tee bar making sure the pivot rod is on the access panel side of the tee bar.
- 3) Finger tighten the bolts so that movement along the tee bar is still possible but they can not be removed.
- 4) Offer up the hinged end of the access panel and locate the pivot bracket rods into the curved slots on the panel. Move the brackets outwards so the tile hangs from the rods and tighten the fixings.
- 5) Finally, to close the access panel, offer up the locking end to the tee bar and engage the lock when the panel is level with the ceiling.

